

Fusion+



Fusion+ - Safety and Efficiency

Race officials broadcast directly to drivers

- Faster line-ups and restarts
- Instant notification of track conditions



866-301-7223
www.raceceiver.com



Fusion+ Basic Instructions

Advanced instructions can be found on our website

- 1. Power On** - Press **Red** button for 3 seconds
Off - Press **Red** button for 5 seconds
- 2. Set Channel** - Press **Blue** button until display blinks
Press **Red** button to advance 100 channels at a time
Press **Arrow buttons** < > to scroll up/down to channel
Press **Blue** button to lock on channel, blinking stops
- 3. Set Volume** - Press **Arrow buttons** < > up/down to adjust audio level
- 4. Change Default Channel** - (**Set Channel** See above)
Hold both **Arrow buttons** < > down for 2 seconds
- 5. Button Lock**
To prevent accidental change of channels or audio level
Lock - Press the **Red & Right Arrow** > buttons together for 5 sec "LOC" will blink on the display
UnLock - Press the **Red & Right Arrow** > buttons together 2 sec
- 6. Squelch** A static filter. Default in ON. Indicator (SC) shows on the display. To test earpieces, turn squelch off by pressing
Left Arrow < & **Blue** button at the same time, you should hear static. After 3 seconds, the static should go away when the squelch goes back to default ON



Accessories
www.raceceiver.com

